

Nugsmasher XP Operating Instructions

Thank you for the purchase of your Nugsmasher XP. We have designed this unit for the purpose of effortless rosin extraction for up to 28 grams of flower. When setting up your unit, please ensure your stand is suitable for the weight of the machine. Also note that the unit gets hot and the high temperature hydraulic heat plates are capable of bodily injury if not used in a safe manner. (Please do not attempt to open your unit casing as this will void your factory warranty.)

While our products are sturdy and built to last, they are also heavy and shippers can be rough during handling. If there are any problems from shipping and your item does not deliver safely please contact us direct so we can resolve the matter immediately.

As always, please feel free to call us at any point with any questions or concerns at 951-272-9800 or <u>Contact@Nugsmasher.com</u>.





Quick Start Guide:

When starting your unit make sure the plates are closed (surface of plates should be pressed together) this will allow the temperature sensor in the bottom plate to get an accurate top and bottom reading and distribute the desired temperature to <u>both</u> plates.

Additionally, bring plates together for a minimum of 20 seconds between presses if more than 5 minutes passes to ensure accurate temperature readings. It is best to leave the plates together any time the machine is on and not in use.

KEEP RELEASE VALVE IN CLOSED "CLOCKWISE POSITION" WHEN NOT IN USE

Please note that under any circumstances do not turn release valve more then ½ a turn in the open (counter clockwise) direction as this will void your warranty and may result in hydraulic fluid loss. Also make sure when not in use or stored, the release valve must be in closed tight (clockwise) position.

WARNING! Never turn your release knob more than ½ full turn counter clock wise from tight.



Turned to the max!



Turned too much!

Please Note: Your release knob is factory designed to be a slight upward



Once you set up your Nugsmasher XP in the desired operating location, you can auto tune your temperature controls if the factory settings aren't holding temps within expected tolerance levels. (Ideal temp range is 180-220F for flower presses)



To Initiate Auto Tune:

Hold the "<</AT" key for more than 3 seconds until the green AT lamp (light) comes on and the auto tune process will begin. The unit will heat up and cool down around the set temp approx. 3 times and will adjust its settings each pass to fine tune itself. Auto tune is complete when AT lamp (light) turns off. (Note the factory settings as follows P) 5.50 l) 200.0 D) 9.10)

For other settings refer to temperature controller instructions, manual enclosed.

Make sure you have the handle inserted properly or the press pump won't work, the handle piece sits on the lower end when inserted.

For more tips and tricks; follow our pages on Instagram and Facebook. Also, Google and YouTube are the best resources for "how to press" video tutorials ..and remember, practice makes perfect!

*Note, customer is liable for any shipping charges or damage as a result of sending unit to PMG for service or warranty repair. It is recommended you hold onto the packaging that comes with the unit. Please feel free to contact us with any questions

Adjusting Temperature:

To adjust the plate set temperature press the **blue** "<</AT" button once and you will notice the first row of digits start to flash. Press the "<</AT" button again and it moves over one more digit. Continue to press the AT button until the number you want to change is flashing and then press the **green** up or down arrows to select desired temperature setting. Once you have changed to your desired temperature press the set button once to lock in temperature. It is not advised to go into any other programming modes as your unit has been factory preset for optimum settings. Note: US models are set for Fahrenheit and all international orders are set in Celsius unless specified otherwise.





Set power switch to the "on" position. You will notice on your control screen there are two rows of digits. The top is the current temperature of the heat plates. The bottom is the set temperature. The XP comes preset at 200 degrees Fahrenheit and will take approximately 5-7 minutes to reach set temperature depending on your location.





Ideal Temperature:

Operating Unit:

Before your unit is turned on, insert handle into the vertical opening on the right side of unit. Notice there is a round tube that your shaft handle will be inserted into for plate compression operation. Pump handle until plates are lightly pressed together. The Nugsmasher XP has 2 heating element in each plate and between presses of more than 3 minutes and especially during initial warm-up, it is advised to bring the plates back together to ensure exact set temperature is maintained in both plates.

The ideal pressure and temperature will vary depending on strain and growing techniques so don't be discouraged on your results when you press new material. We recommend when pressing a new strain to start at approx. 220 degrees for flower and notate your yield results (weight of material in vs. rosin out). Perform additional test presses and drop 5 - 10 degrees per press until you notice your yield percentage starting to drop. Adjust back to the previous temp and that will be your ideal temp for that strain. It is advised to have a thermal temp gun to verify and check temperatures from time to time. Use a small piece of electrical tape as the high gloss on heat plates will affect accurate temp readings if using a thermal temp gun.

Loading Micron Bags:

Nugsmasher extraction bags, are recommended for optimal yield and clean quality rosin. Our bags are hand-made and packaged in the USA! Nugsmasher extraction bags are specifically designed to work with the weight of fresh cured flower and are labeled accordingly at: **3.5 g** (1.1q-3.5q), **7 g** (3.6q-7q) and **14 g** (7.1g-14g). This assumes the bags are loaded (BTS) or bottle/barrel-tech style (upright so that you end up with the round coin like puck once fully pressed). This perfected method allows you the ability to put the proper weight of flower into the bag and get a consistent extraction every time. This method also applies the proper pounds per square inch of pressure (PSI) on your product and eliminates the guess work.

3.5g bag (1.1g-3.5g) = 1.5"-1.6"Diameter

7g bag (3.6g-7g) = 2"-2.2"Diameter

14g bag (7.1g-14g) = 2.4"-2.7"Diameter

As the micron gets smaller the diameter gets larger, this is the reason for the variance in the diameter numbers above. We prefer to use 160 micron for fresh flower, as flower dries we go down in micron screen size (for dry flower use 90 micron). Micron size determines the diameter (surface area) of the smashed bag. For nugs 1g and smaller no bag is necessary.

For more details about loading Bottle-Tech and/or Barrel-Tech style (BTS) please visit Nugsmasher on YouTube:https://www.youtube.com/watch?v=0osvcD7CLK0 Remembr "Fire in fire out"!

Pressure:

Once your unit reaches set temperature you're ready to start pressing. Once you have your material between *parchment paper* (do not use wax paper!), slowly start raising plates by pumping handle. It is key to do this slowly to properly build heat into your material. The entire pressing process should be between 90-120 seconds depending on your strain. Your Nugsmasher XP is most capable of over pressing your material as the mistake made most with new extractors. There are several videos available online on the Nugsmasher official Instagram account as well as the Nugsmasher YouTube channel that are very beneficial for techniques and tips of your rosin extraction. Note the leverage designed with your pump handle is only designed for hand operation. Do not use and other leverage device or foot to push handle down as you will cause damage not covered by warranty.



Nugsmasher XP

Plate Pressure vs. Gauge Pressure

Plate Pressure:

The applied plate pressure is determined by the extracted material's surface area (bag, size and quantity) and the applied pressure to the extraction (Gauge P.S.I. Reading) Example See chart below

Gauge Pressure: Gauge pressure (psi) hydraulic rams fluid

Gauge pressure (psi) is measured from the hydraulic rams fluid pressure. This is the applied pressure and should be adjusted to the surface area to achieve optimum results. Example See chart below

Surface AREA KEY Nugsmasher extraction bags, our bags are recommended

Nugsmasher extraction bags, our bags are recommended for optimal yield and clean quality rosin. Our bags are hand-made in the USA! Nugsmasher extraction bags are specifically designed to work with the weight of fresh cured flower together with our extraction machines and are labeled accordingly at: 3.5 g, 7 g and 14 g this assumes the bags are loaded (BTS) or bottle/barrel-tech style (upright so that you end up with the round coin like puck once fully pressed). This perfected method allows you the ability to put the proper weight of flower into the bag and get a consistent extraction every time. The reason for this is that it allows for the proper pounds per square inch, pressure (PSI) on your product and eliminates the quess work.

3.5g = 1.5" Diameter = 1.77" in surface area 7g = 2"-2.2"Diameter = 3.14" in surface area 14g=2.4"-2.7"Diameter = 4.91" in surface area We prefer to use 160 micron for fresh flower, as flower dries we go down in micron screen size (for dry flower use 90 micron).

NOTE: As the micron gets smaller the diameter get slightly larger. example: 90 micron is about 5% larger at the end of your extraction

BAG Size and PSI PSI PSI **Nugsmasher XP** PSI PSI quantity 750 1250 PSI ON Material 500 1000 1500 One 3.5G Bag (BTS) 1155 577 Gauge Reading 385 770 962 PSI ON Material 500 750 1000 1250 1500 Two 3.5G Bags (BTS) 1154 Gauge Reading 770 1539 1923 2309 750 1000 1250 1500 PSI ON Material 500 Three 3.5G Bags (BTS) 2886 3463 1154 1731 2309 Gauge Reading PSI ON Material 750 1000 1250 1500 500 One 7G Bag (BTS) 684 1126 1368 1710 2052 Gauge Reading PSI ON Material 750 1000 1250 1500 500 Two 7G Bags (BTS) 2052 3420 4104 1368 2736 Gauge Reading PSI ON Material 500 750 1250 1500 1000 One 14G Bag (BTS) Gauge Reading 1069 1603 2138 2672 3206 PSI ON Material 750 1000 1250 1500 500 Two 14G Bags (BTS) 4275 5344 6412 Gauge Reading 2138 3206

example illustrated below

Nugsmasher XP consistency chart PSI to surface area bag selection

EXTRACTION EXAMPLE: Circled Above on chart

One 3.5g bag:



Plate Pressure: 750 PSI

There is only one 3.5g bag that has the total surface area of around 1.77in²

Gauge Pressure: 577 PSI

To extract your material

at 750 PSI with a surface

it would equal 577 PSI on

your gauge.

area of 1.77in (one 3.5g bag)



There are two 3.5g bags that have the total surface area of around 3.54in

in quality and yield percent results

Gauge Pressure: 1154 PSI

To extract your material at 750 PSI with a surface area of 3.54in (two 3.5g bag) it would equal 1154 PSI on your gauge.



4