


**Works with most cones  
up to 110mm.**



### **Step 1**

Drop cone into NugPacker. Make sure cone is against the bottom of the NugPacker before moving on to Step 2.

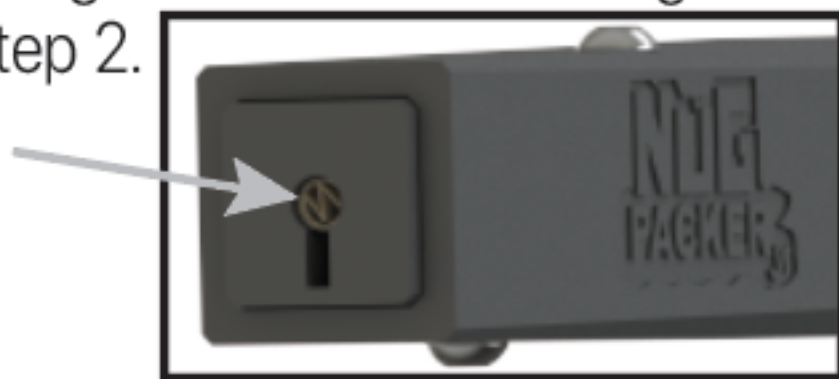

### **Step 2**

Loosely load finely ground material in to the top of the NugPacker and pack your cone to desired density.

Hold base OFF surface to settle material into cone.

(Achieve this by holding the base in mid air pulling up 1/4-1/2" and releasing).



Hold base ON surface to pack material into cone.

(Achieve this by holding the base firmly ON a hard surface pulling up 1/4-1/2" and releasing).

### **Step 2**

Insert any key into bottom keyhole to remove packed cone and enjoy!

