
Tools Required:

3

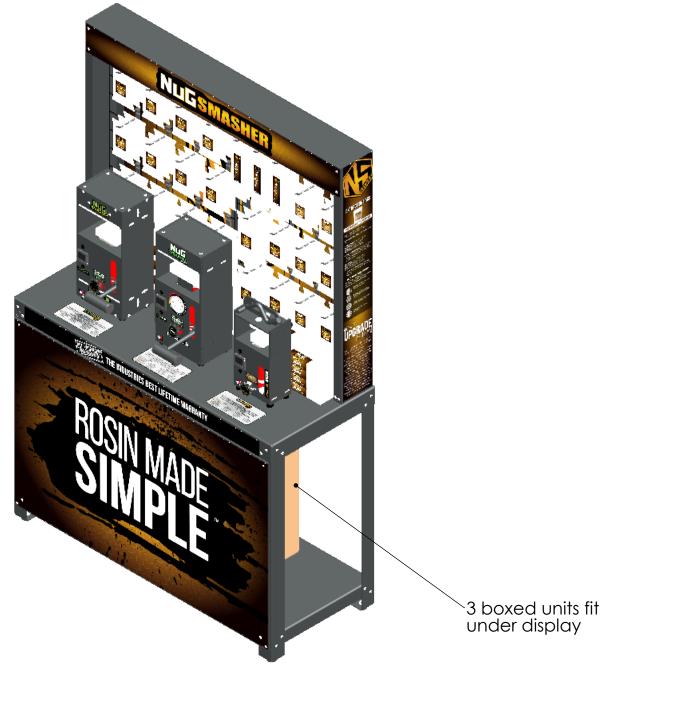



Phillips Screw Driver 5/32" Allen Wrench 7/16" Wrench





Two people are required to build units

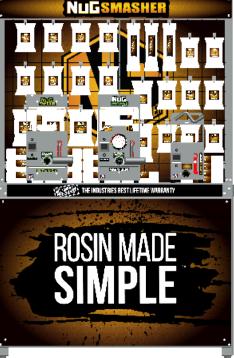

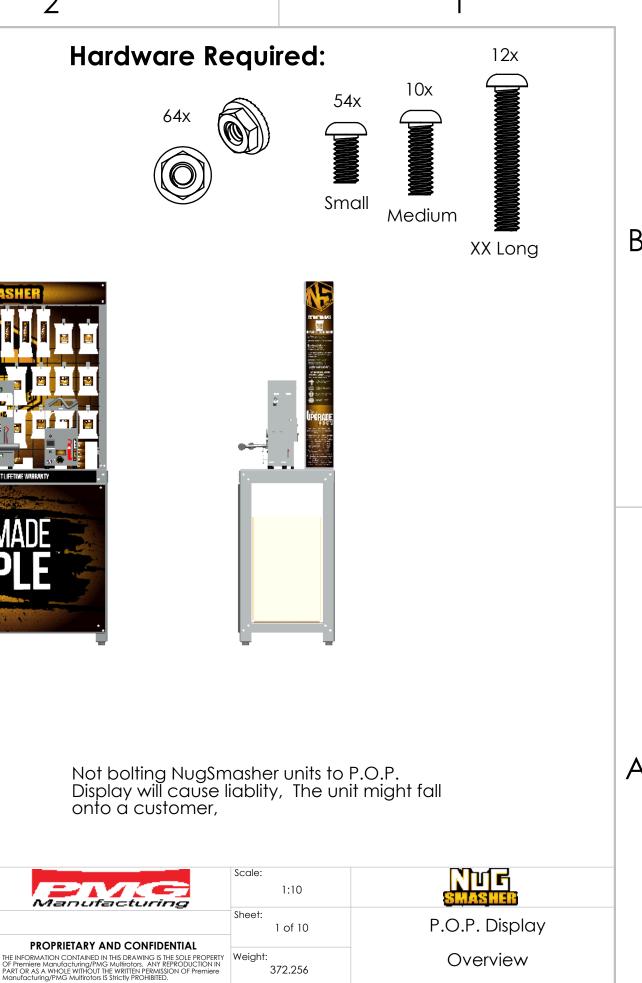


2

4

4


Α

| ITEM NO. | PART NUMBER | QTY. |
|----------|-------------|------|
| 1 | Part B | 2 |
| 2 | Part C | 1 |
| 3 | Part D | 1 |
| 4 | Part N | 1 |
| 5 | Small Bolts | 12 |
| 6 | Nuts | 12 |




В


Α

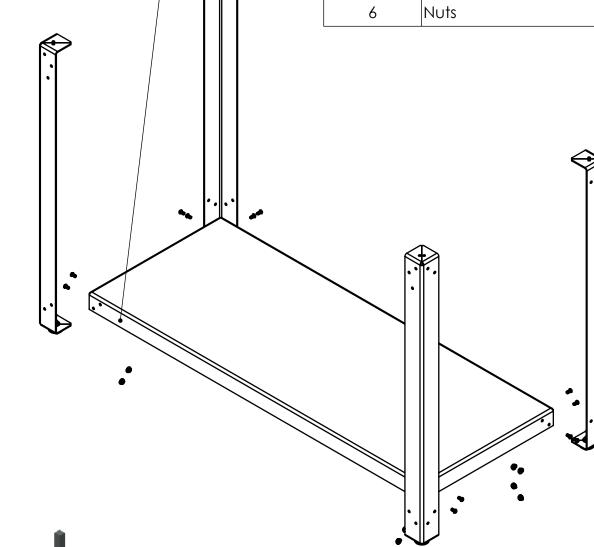




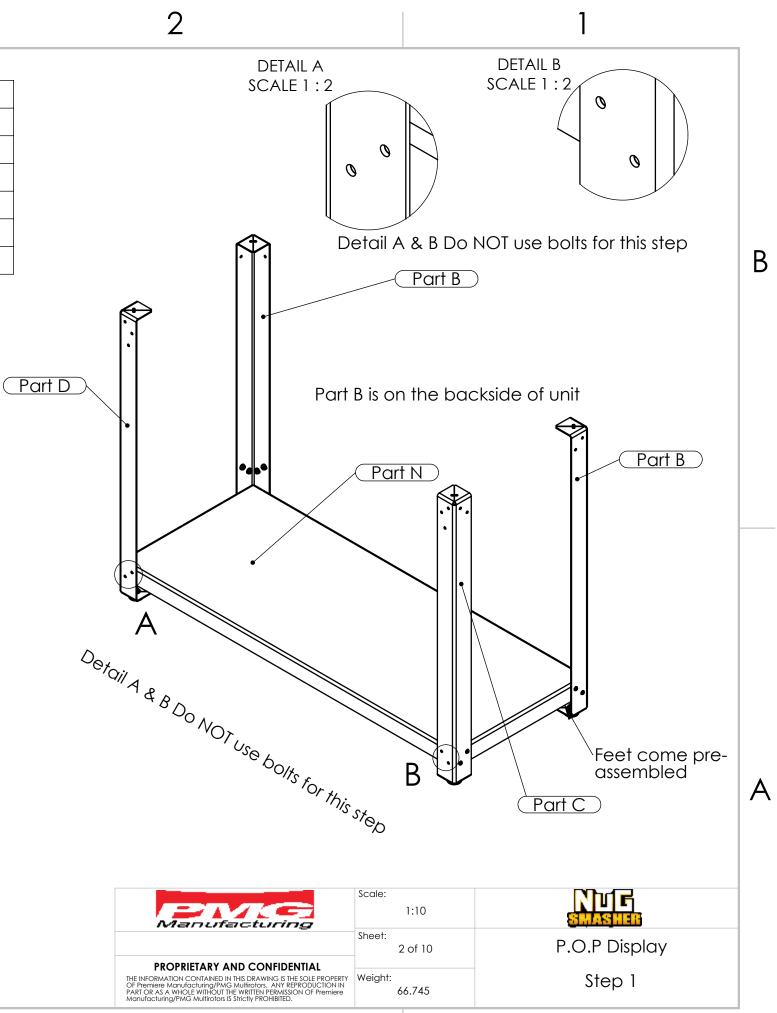



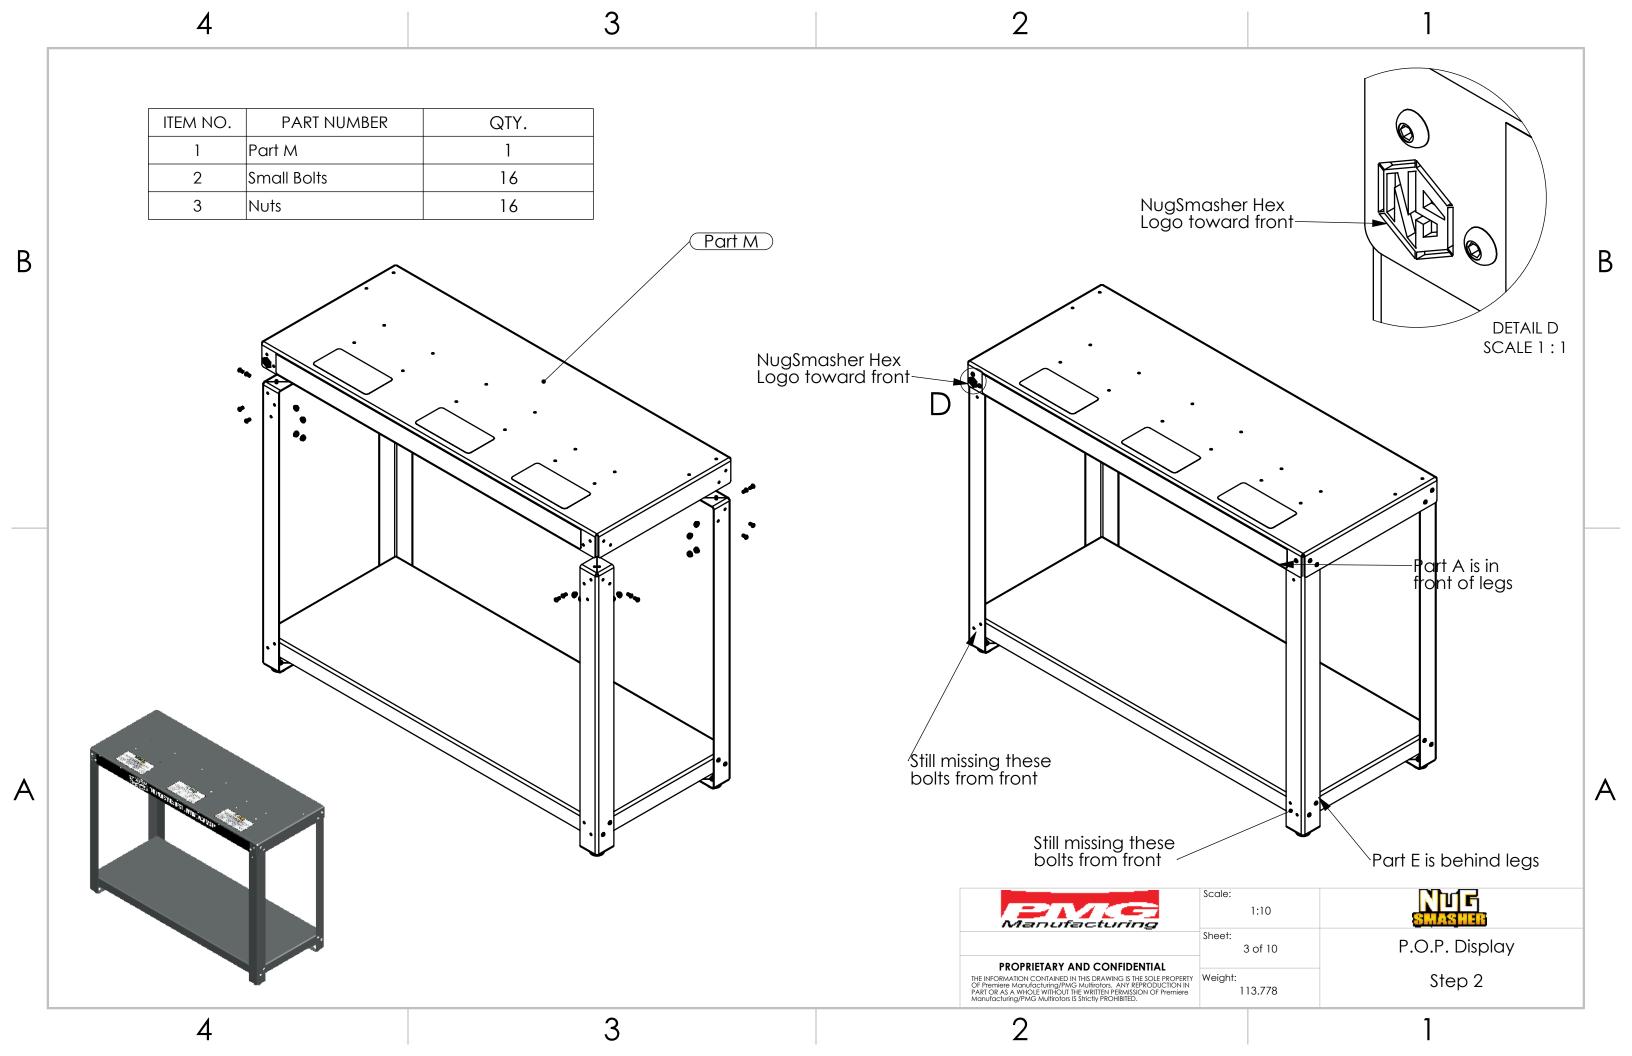


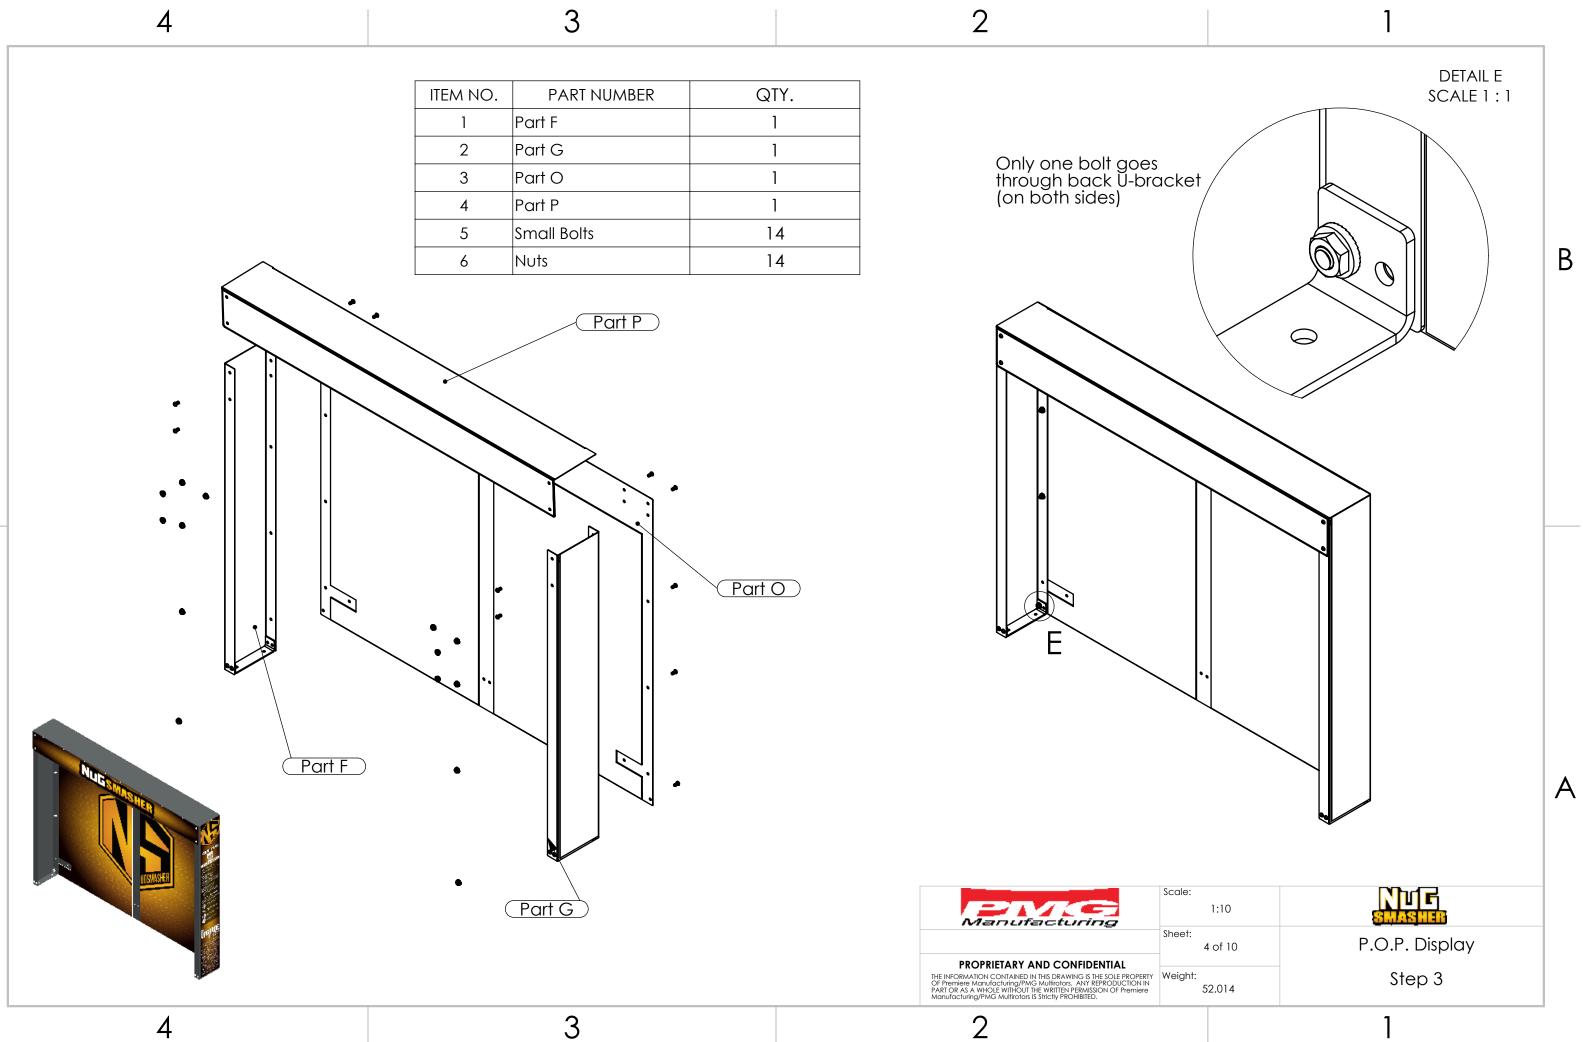


А


А

| ITEM NO. | PART NUMBER | QTY. |
|----------|-------------|------|
| 1 | Part J | 4 |
| 2 | Part R | 1 |
| 3 | Small Bolts | 12 |
| 4 | Nuts | 12 |

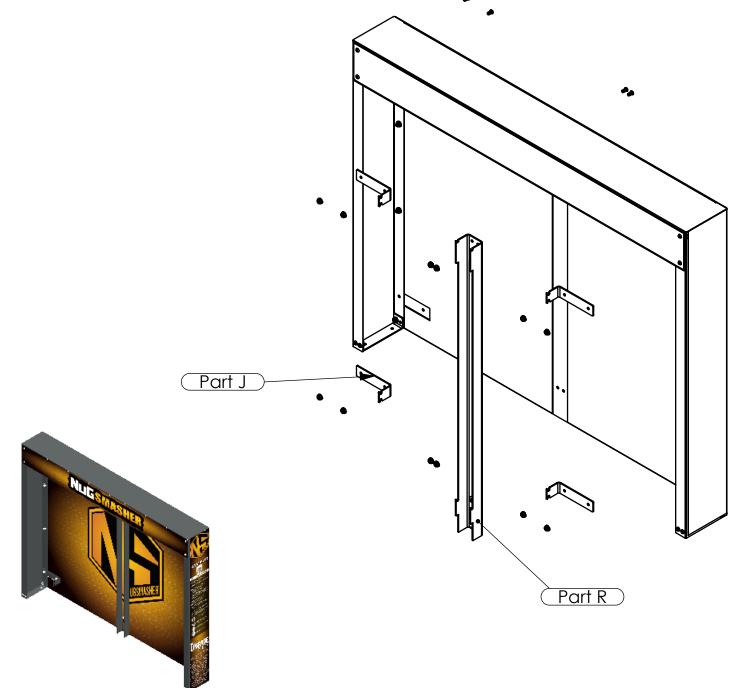

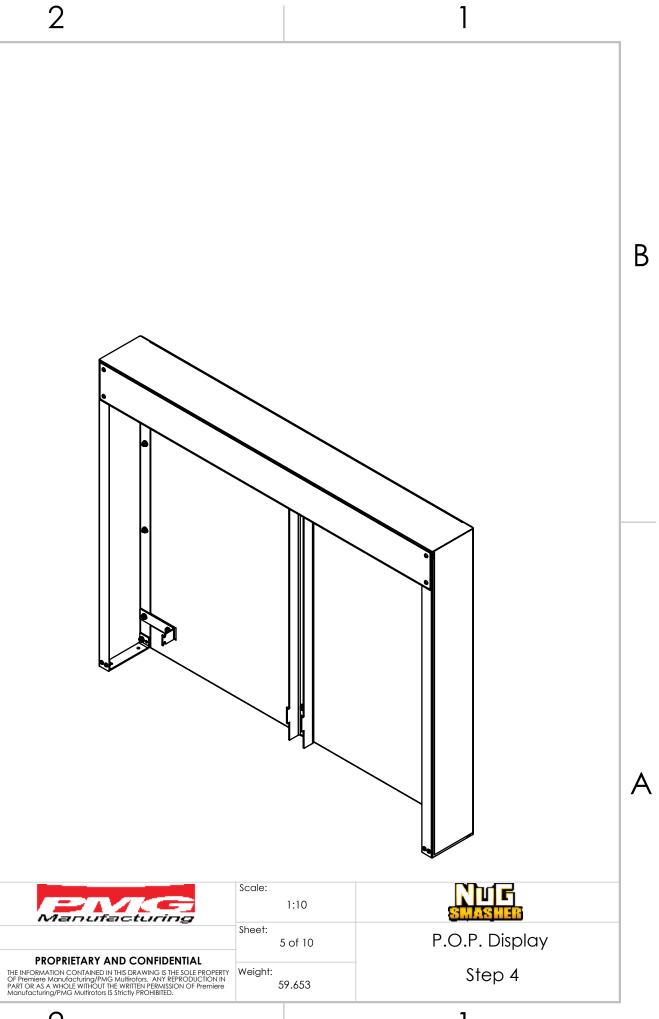



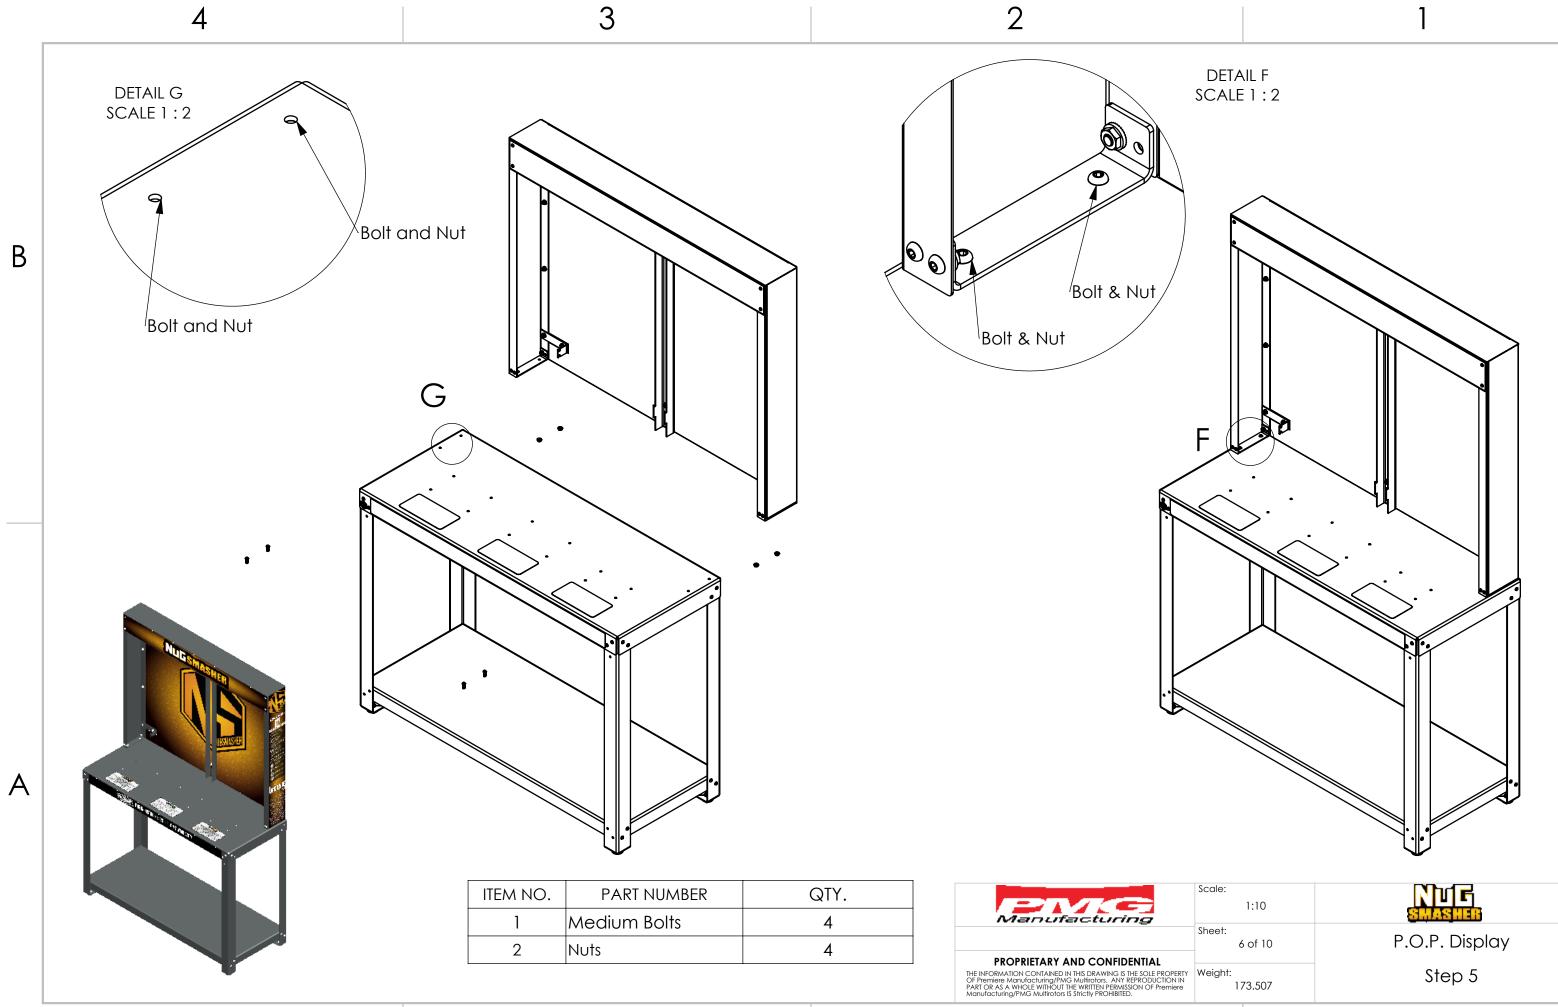

2


4

3

В

Α


п

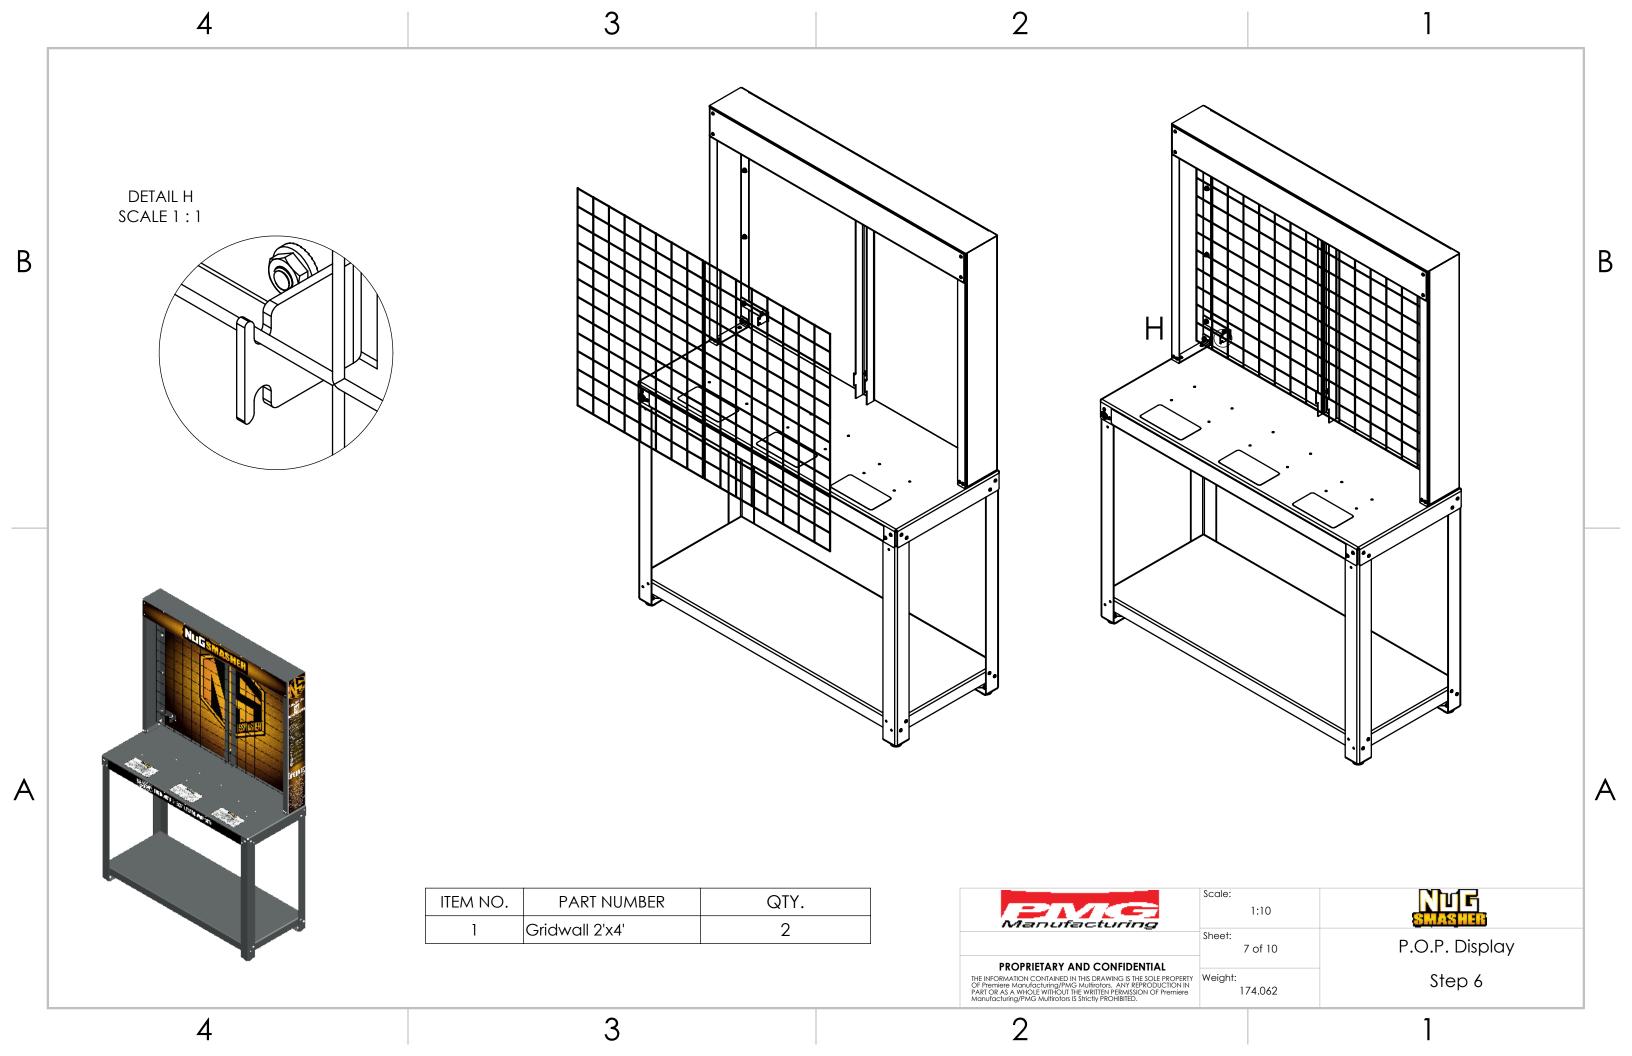


| ITEM NO. | PART NUMBER | QTY. |
|----------|--------------------|------|
| 1 | NugSmasher Mini V2 | 1 |
| 2 | NugSmasher V2 | 1 |
| 3 | NugSmasher XP V2 | 1 |
| 4 | XX Long Bolt | 12 |

4

1.) Remove 12x screws from NugSmasher Mini, NugSmasher OG, & NugSmasher XP that hold the feet in with a phillips screw driver.

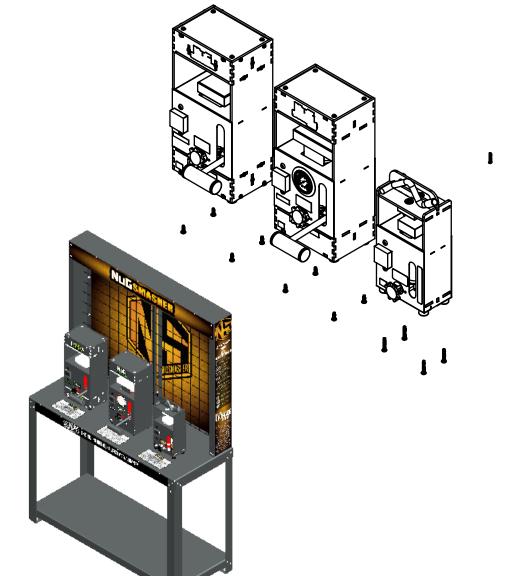

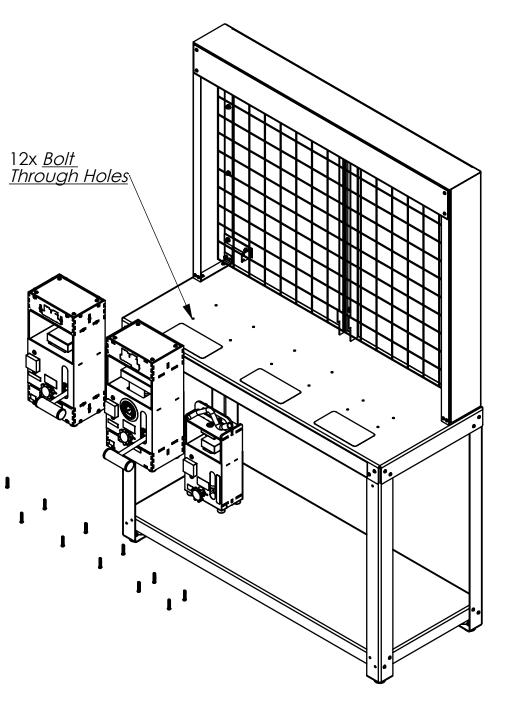

2.) Set NugSmasher Mini, NugSmasher OG, & NugSmasher XP with rubber feet alligned with <u>bolt through holes</u> and install long bolts ensure units are completly secure for liablity reasons

2





PROPRIETARY AND CONFIDENTIAL THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF Premiere Manufacturing/PMG Multirotors. ANY REPRODUCTION IN PART OR AS a WHOLE WITHOUT THE WRITTEN PERMISSION OF Premiere Manufacturing/PMG Multirotors IS Strictly PROHIBITED.

Α

3


3

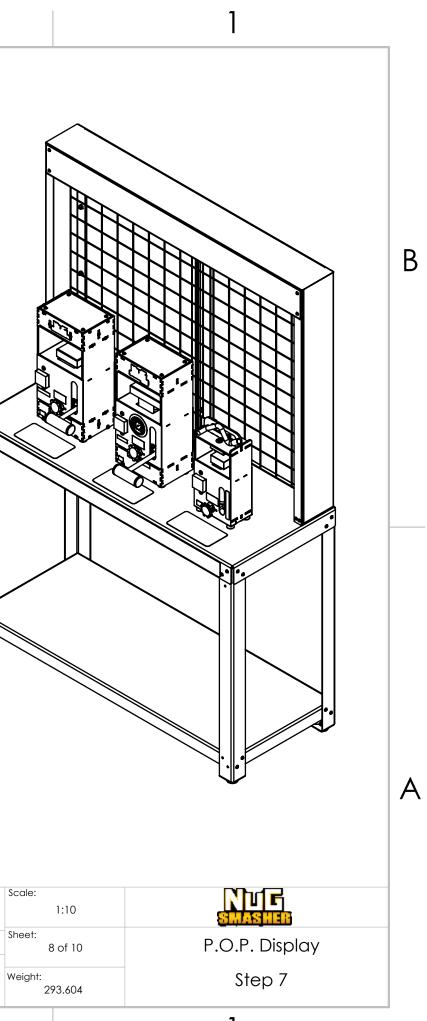


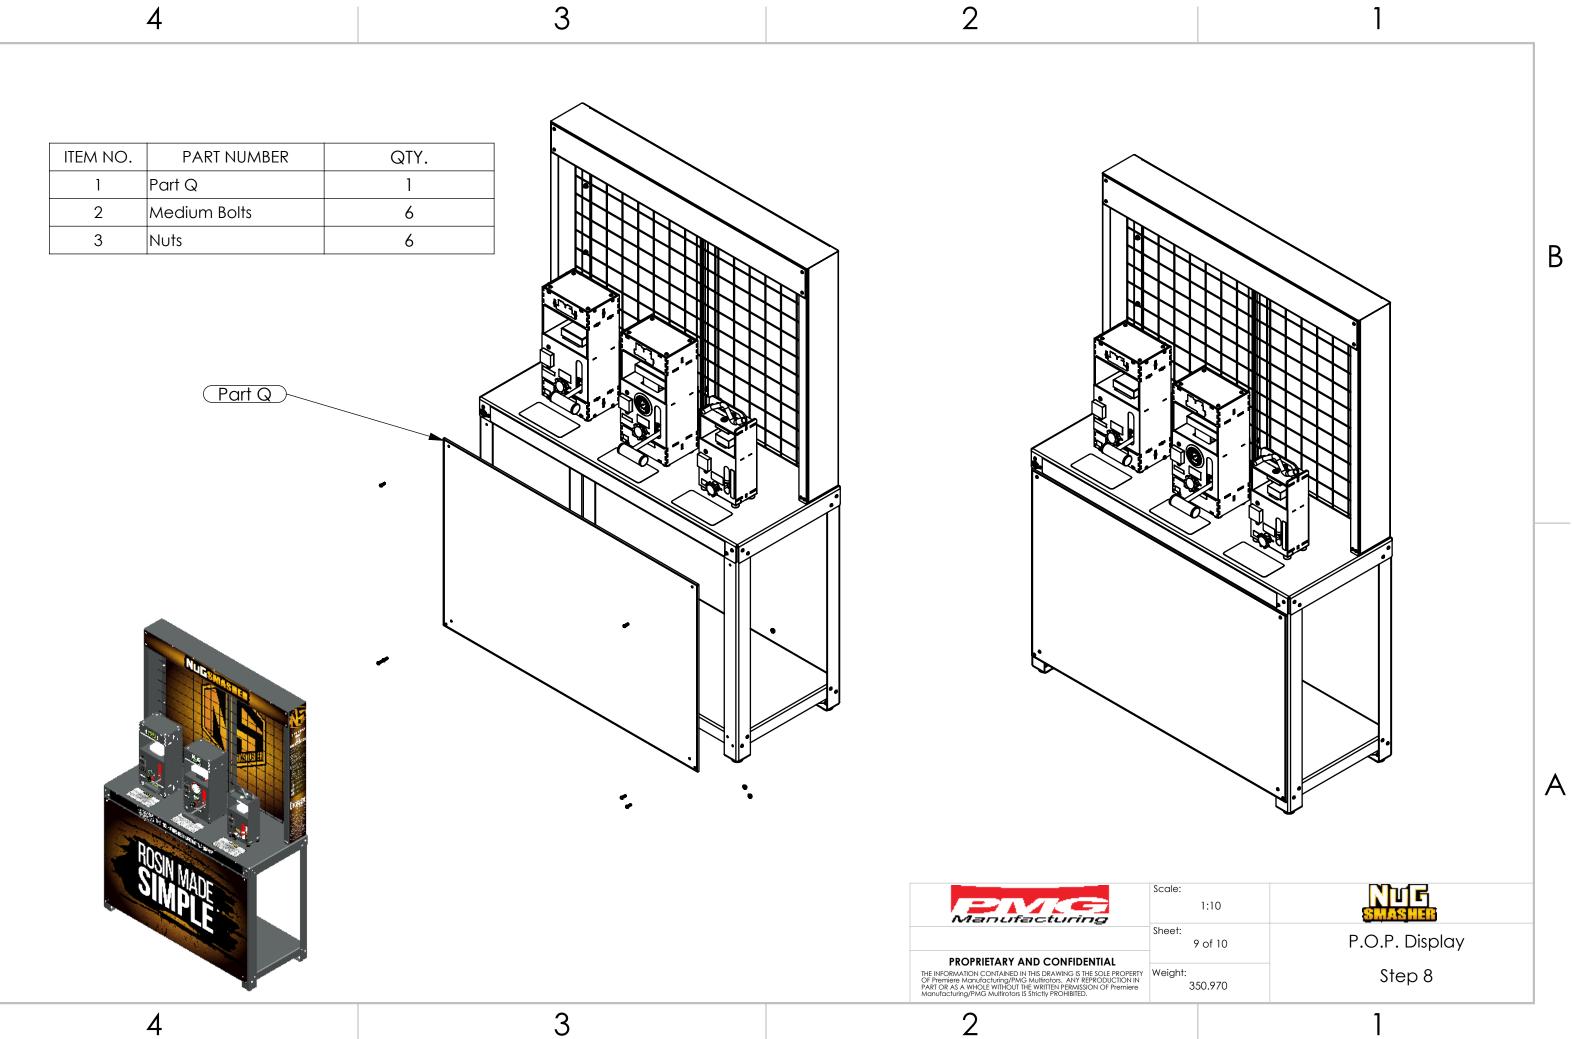

Α



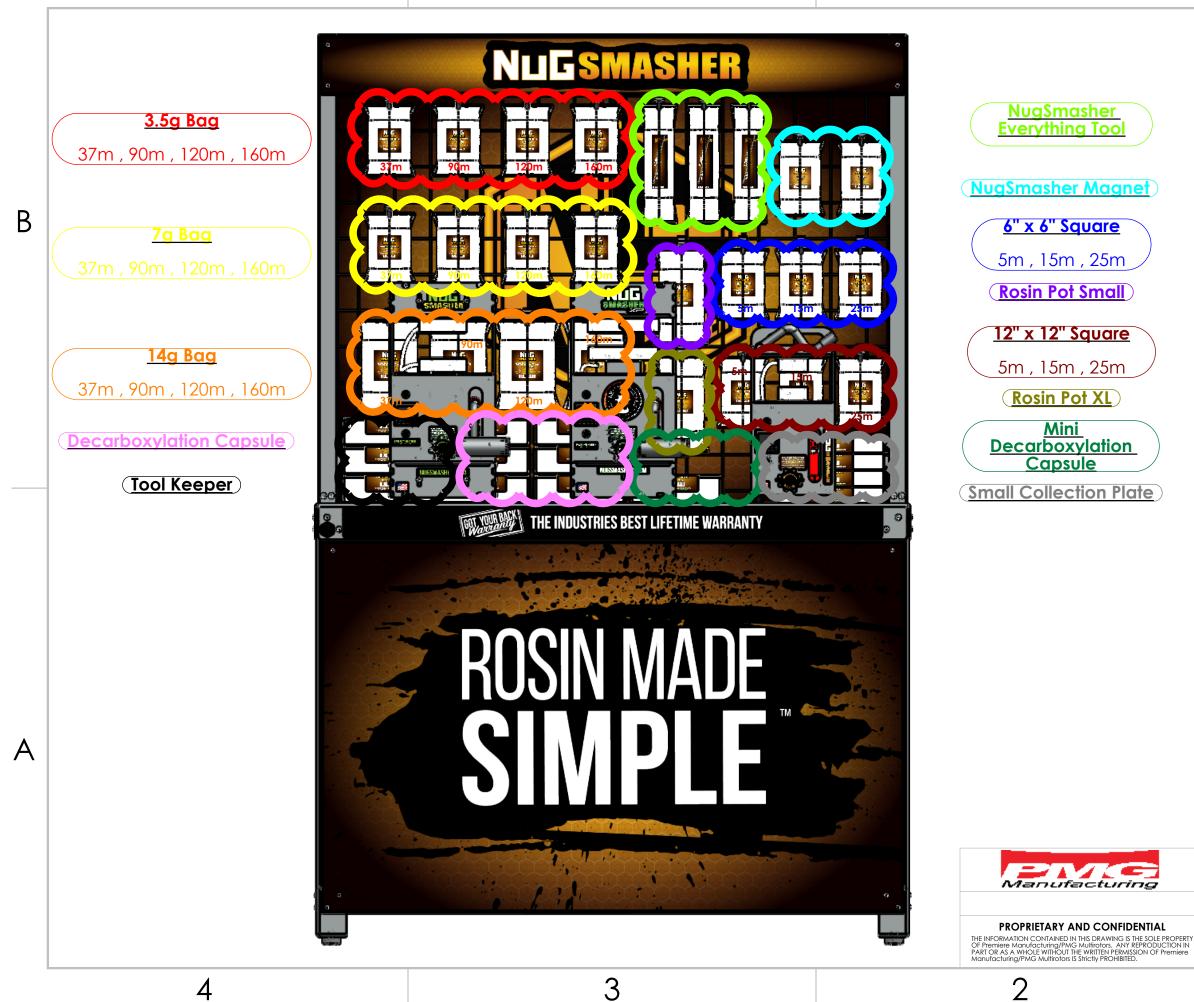

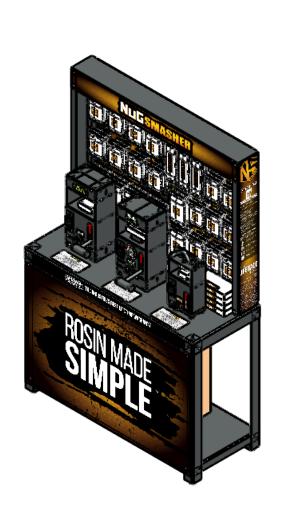

Α

| Scale: 1:10 | |
|--------------------|---------------------|
| Sheet: 10 of 10 | P.O.P. Display |
| Weight: 372.256 | Accessory placement |
| | - |